



# INSTALLING BLINDSPACE® TRACKTRIM® FOR DRAPERY TRACKS

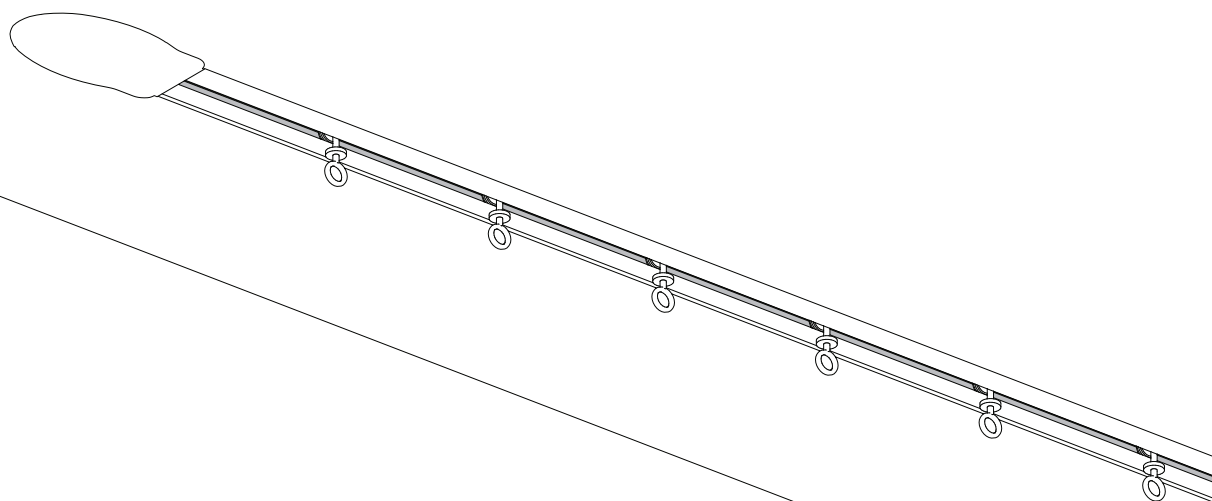

# INSTALLING BLINDSPACE® TRACKTRIM® FOR DRAPERY TRACKS


**NOTE:** Tracks must be securely attached to a solid blocking above as the weight of the drapery will be carried by the tracks. Most weight will be carried where the draperies stack. System fixings are never supplied by Blindspace, installer to ensure their fixing are suitable.

## PARTS

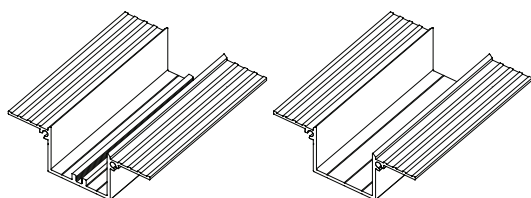


With Screw Channel    Without Screw Channel


Tracks

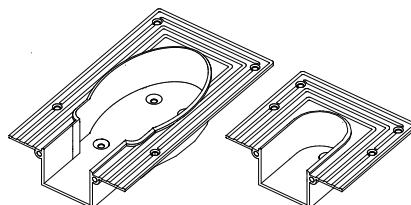


End set

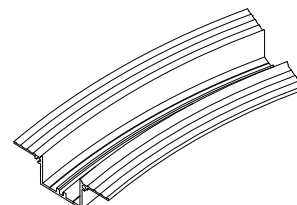

Curved Section




Fixing Bracket




Splice Pins

## TOOLS

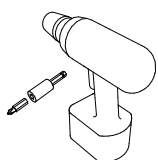


Screw Driver/Driller

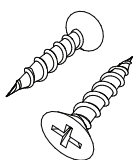


Countersunk Screws




Drill Bits  
2, 4, 6, 10mm




Countersink Drill Bit

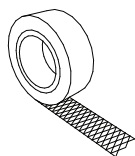


Scrim Tape

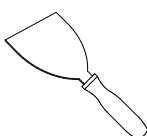

Scraper



Allen Key


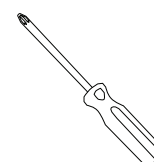


Hand Screw Driver







# INSTALLING BLINDSPACE® TRACKTRIM® FOR DRAPERY TRACKS

## INSTALLATION OPTIONS


### A. Blocking Only

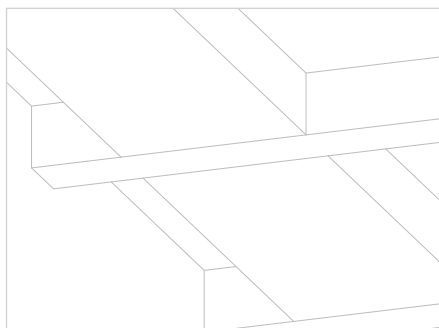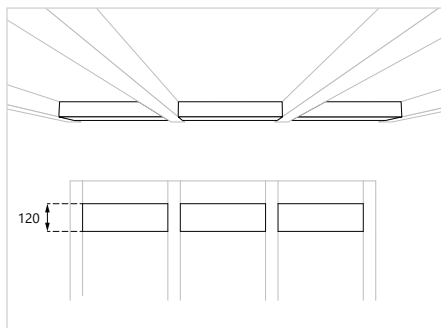


### B. Blocking with Prepared Recess

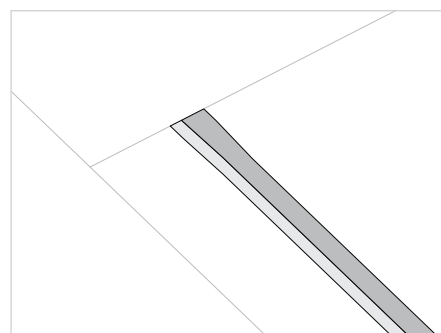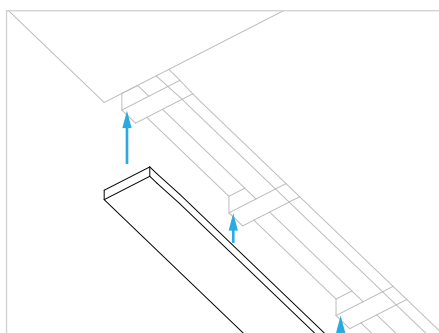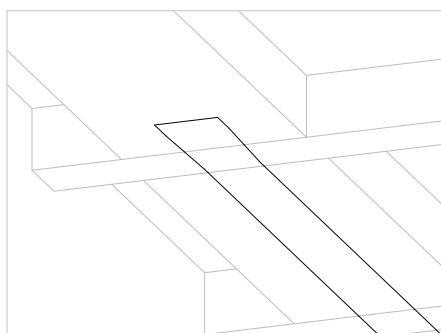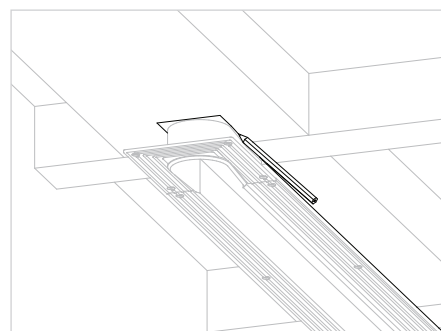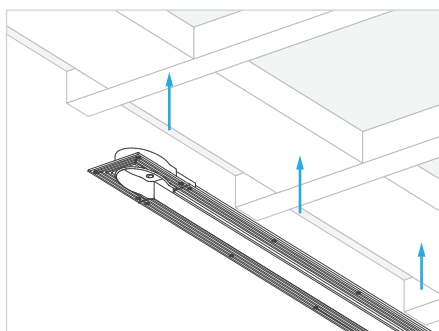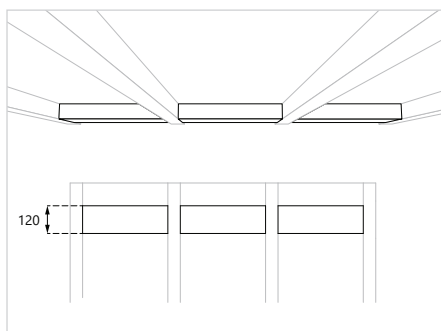


## EXAMPLE CABLE ENTRY OPTIONS

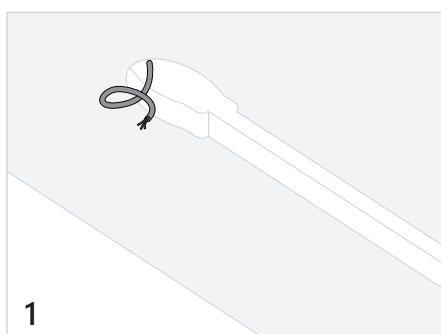

1

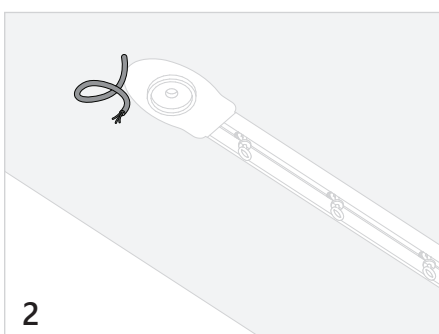








2

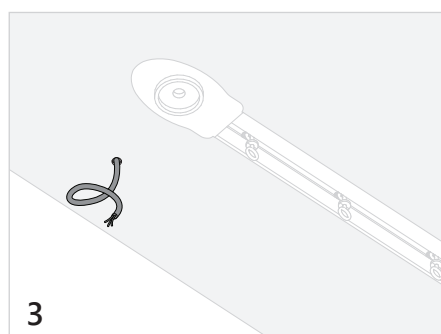

3

# INSTALLING BLINDSPACE® TRACKTRIM® FOR DRAPERY TRACKS

## PREPARE TRACK

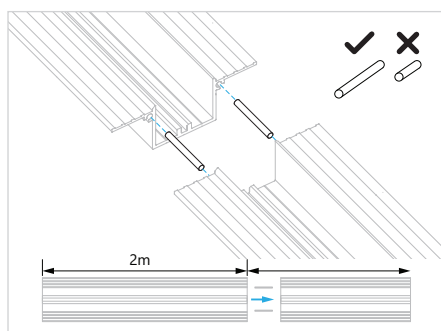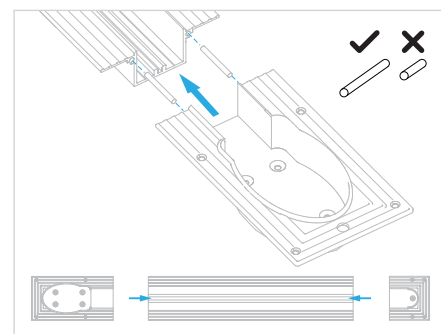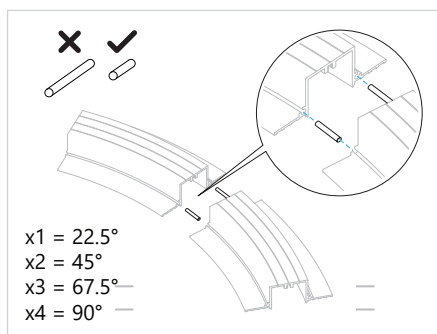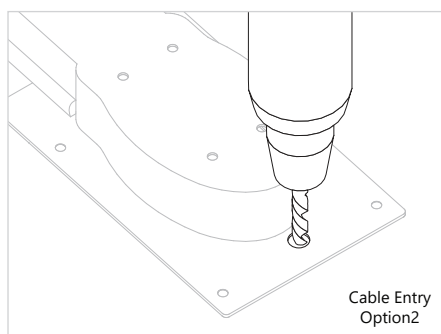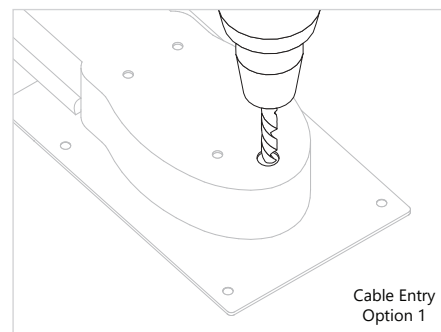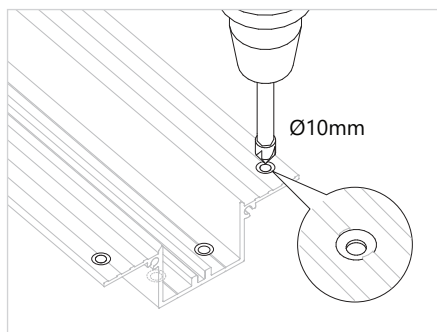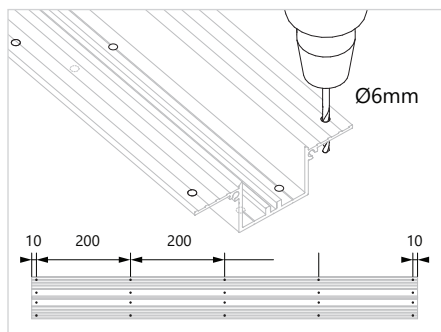




# INSTALLING BLINDSPACE® TRACKTRIM® FOR DRAPERY TRACKS






## INSTALL TRACK

### OPTION A



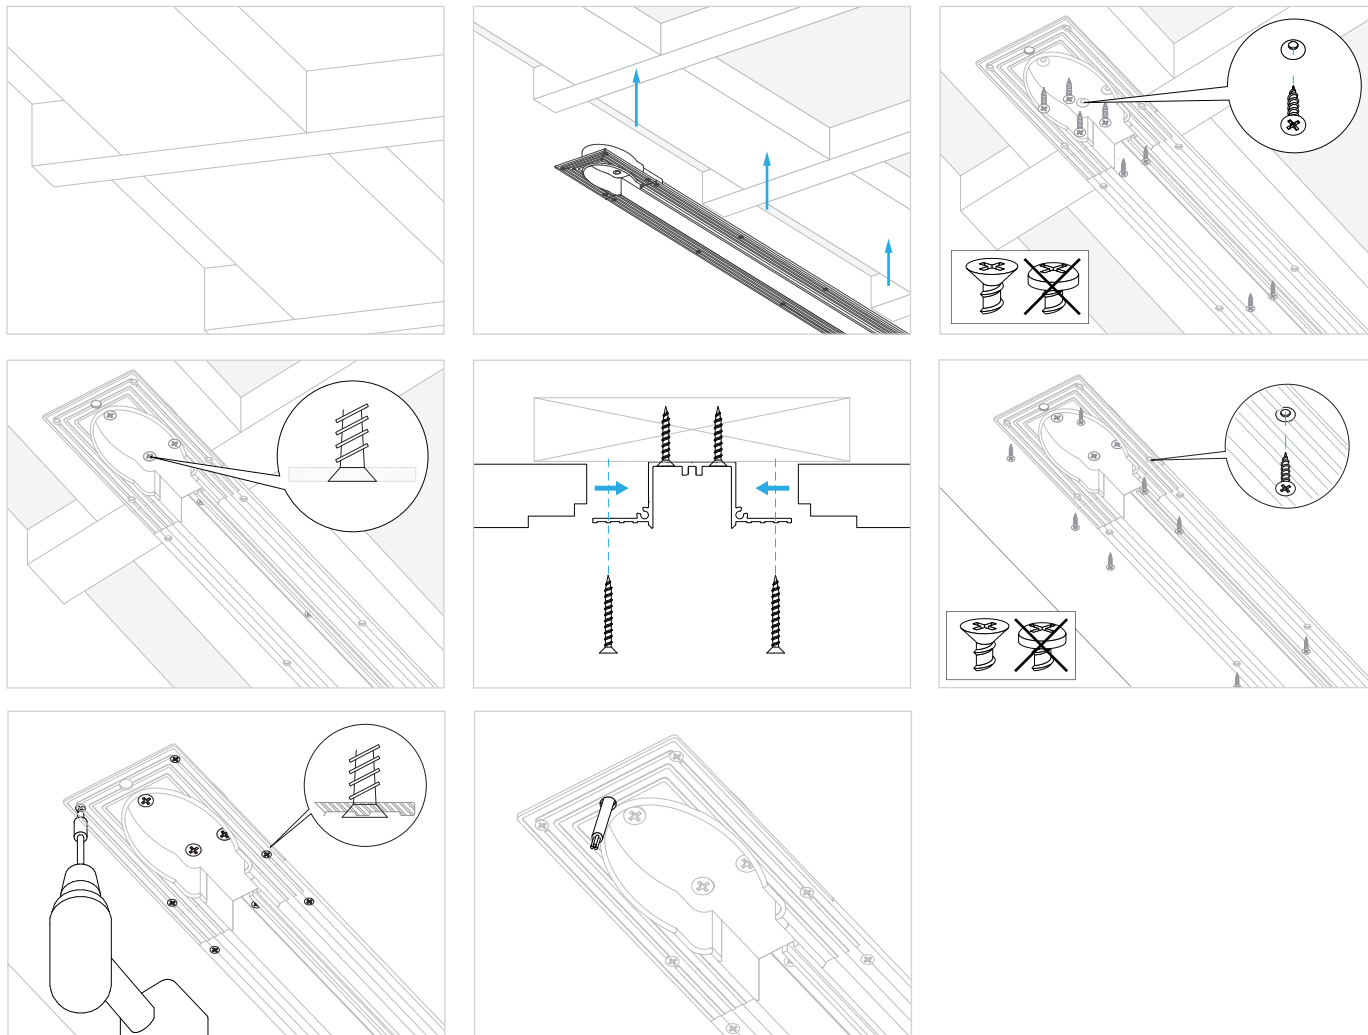


# INSTALLING BLINDSPACE® TRACKTRIM® FOR DRAPERY TRACKS

## OPTION B

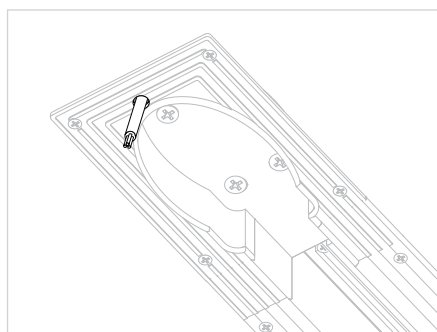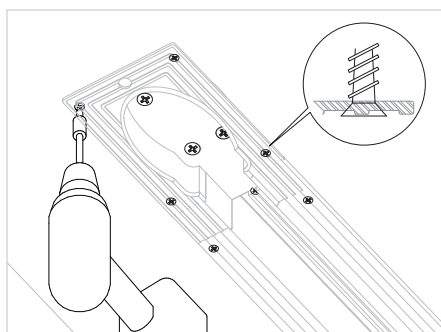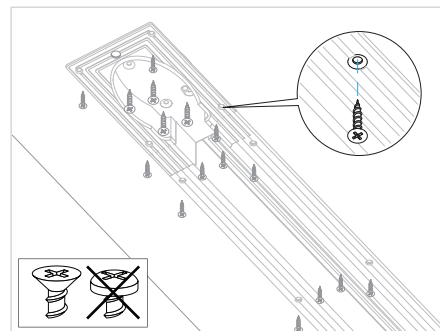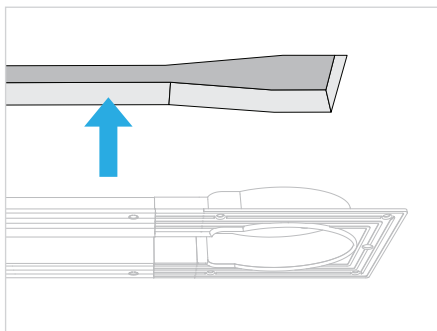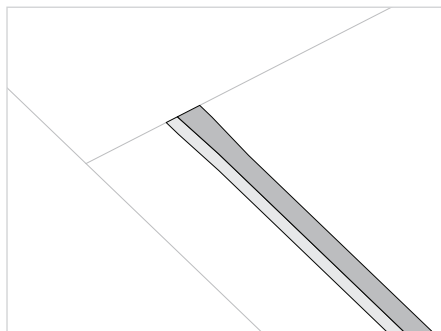

## COMPLETE SURROUNDING CEILING

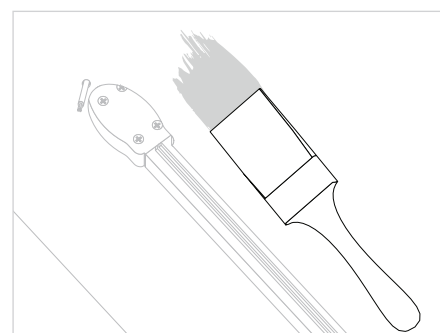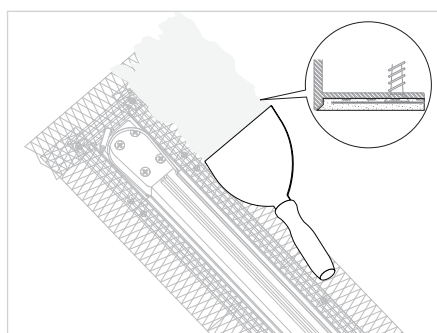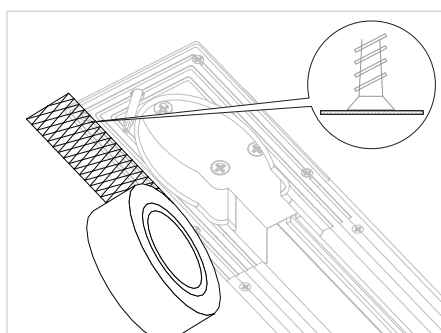

# INSTALLING BLINDSPACE® TRACKTRIM® FOR DRAPERY TRACKS

## INSTALL DRAPERY TRACK

